

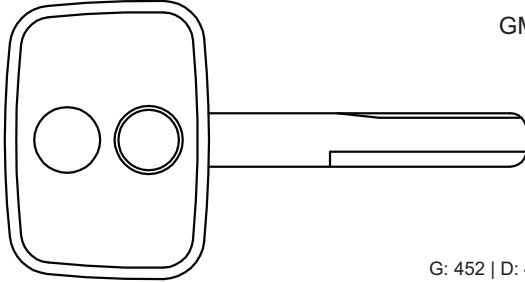

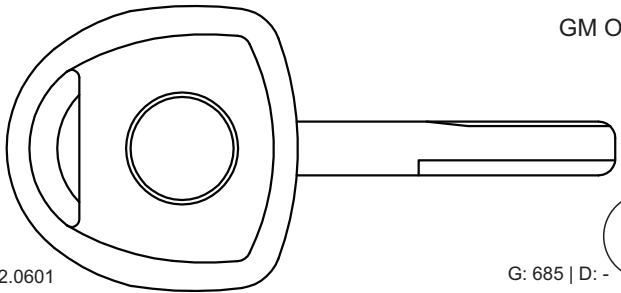


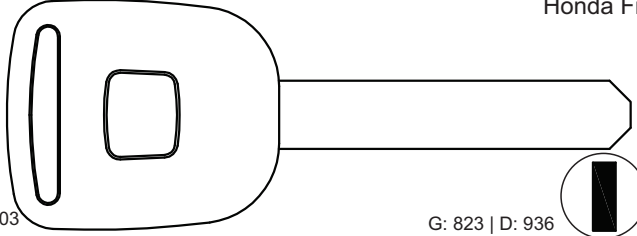


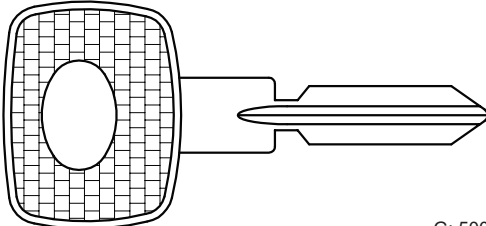

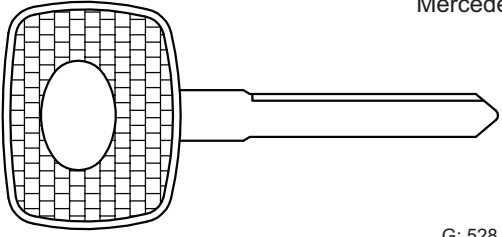

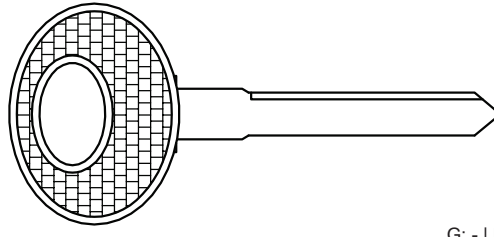


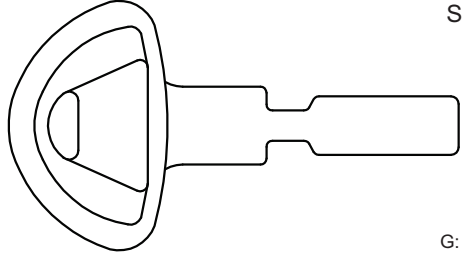


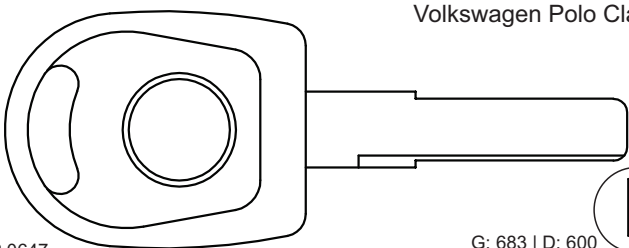

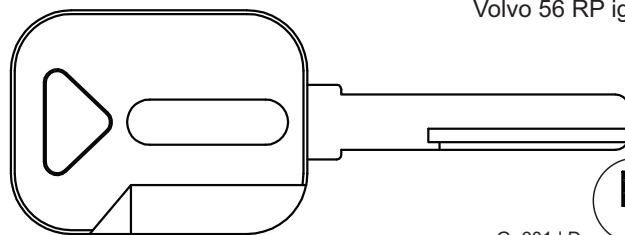
 <p>BMW</p> <p>A02.0414</p> <p>G: 471 D: -</p> 	 <p>chaves e fechaduras</p>
 <p>GM Omega</p> <p>A02.0390</p> <p>G: 452 D: 452</p> 	 <p>GM Omega</p> <p>A02.0601</p> <p>G: 685 D: -</p> 
 <p>chaves e fechaduras</p>	 <p>Honda Fit</p> <p>A02.0903</p> <p>G: 823 D: 936</p> 
 <p>chaves e fechaduras</p>	 <p>Mercedes</p> <p>A02.0423</p> <p>G: 500 D: -</p> 
 <p>Mercedes caminhão</p> <p>A02.0482</p> <p>G: 528 D: -</p> 	 <p>Mercedes</p> <p>A02.0673</p> <p>G: - D: 623</p> 
 <p>chaves e fechaduras</p>	 <p>Scania caminhão</p> <p>A02.0672</p> <p>G: 670 D: -</p> 
 <p>chaves e fechaduras</p>	 <p>Volkswagen Polo Classic</p> <p>A02.0647</p> <p>G: 683 D: 600</p> 



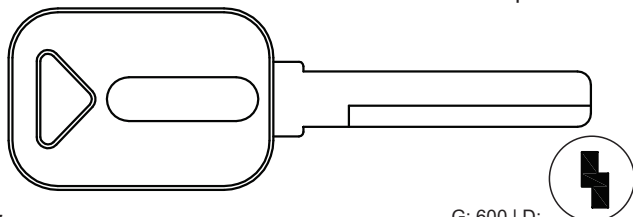
Volvo 56 RP ignição

A02.0496

G: 601 | D: -



Volvo 56 porta malas



A02.0497

G: 600 | D: -

